

Scandi Nordic Shell Chair

Assembly Manual

1, Take out all the chair parts and check the quantity



① Long screws	X14	⑥ black metal bracket	X1	⑪ Seat Cushion	X1
② Short screws	X14	⑦ Front leg	X1	⑫ Backrest cushion	X1
③ Screw gasket	X10	⑧ Back leg	X1		
④ Allen key	X1	⑨ Backrest board	X1		
⑤ Anti-slip pads	X3	⑩ Large curved board	X1		

*** Attention:**

- Screws are divided into two sizes, long and short, and must not be mixed.
- Electrical Screwdriver is not recommended.

2, Take out the front and back legs and put them together as shown below.



3, Turn over and place the black metal bracket to the hole position, then tighten with 6 short screws and 6 screw gaskets.



* Attention:

Do not tighten the screws at this step, tighten after the next step.

4, Align the large curved board with 8 longer screws, no gasket needed.



* Attention:

- Do not tighten the screws until after they are all aligned.


5, Align the seat cushion with 4 long screws and 4 gaskets.



ion:

- The seat cushion has a curvature, and some force is required for alignment.
- Do not tighten the screws until after they are all aligned.
- It is recommended to install them diagonally.

6, Align the backrest board with 2 long screws and 4 short screws.

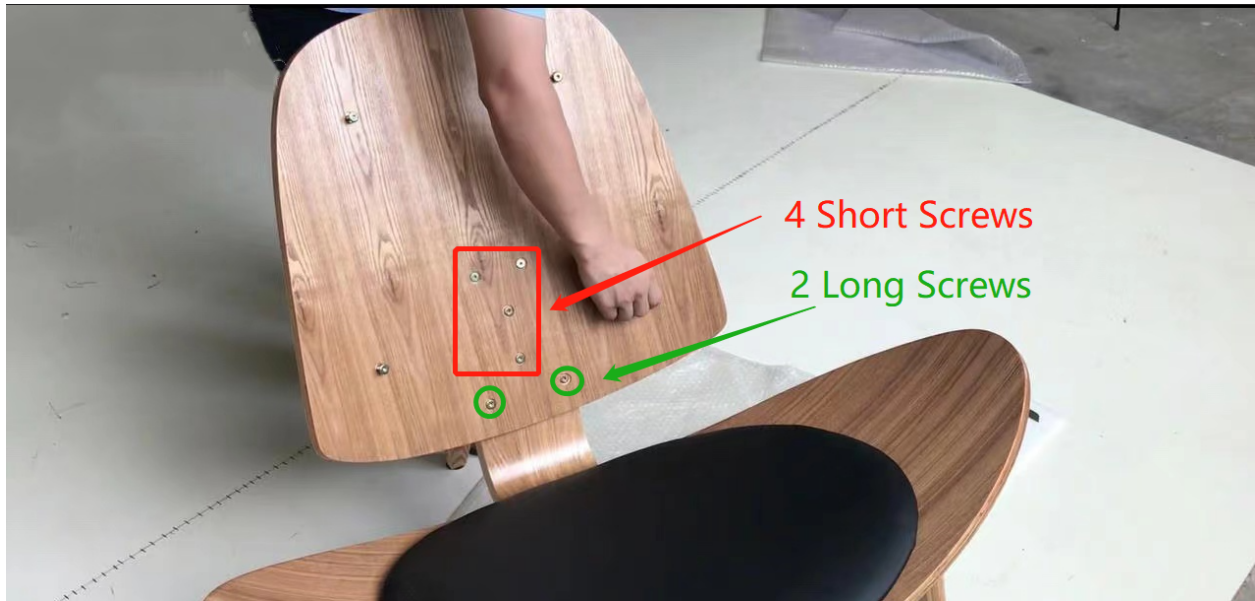

* Attention:

- Tighten the 4 short screws first, then the 2 long screws.
- Do not tighten the screws until after they are all aligned.

7, Align the backrest cushion with the 4 short screws. Only screw in partly, leaving some of the thread exposed. Hang the cushion on the 4 screw heads.



* Attention:

- Do not overtighten the screws of the backrest, there is a risk of screwing through the back panel.

8, Push down on the backrest cushion firmly to lock it in place.

