


# LINSY 林氏家居

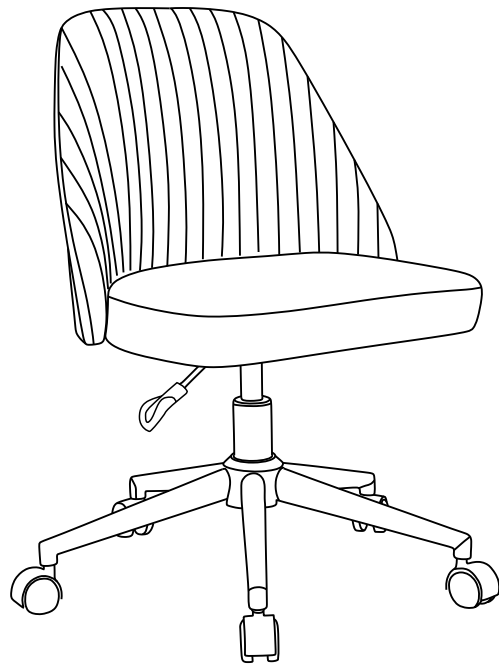




## 安装示意图/Assembly Instruction

产品名称 Model NO.	BY003-A/B	产品规格 Specification	640*615*815/910
-------------------	-----------	-----------------------	-----------------

安装工具 TOOL		安装人数 INSTALLER	
--------------	---	-------------------	---



## 五金表 / Hardware list

编号 NO.	名称 Name	图示 Picture	数量 QTY
Ⓐ	6mm六角扳手 6mm hexagonal wrench		1
Ⓑ	内六角螺丝6*20 internal hexagonal screw6*20		4
Ⓒ	内六角螺丝6*30 internal hexagonal screw6*30		4
Ⓓ	50R小口径插轮 50R Caster		5
Ⓔ	三级气压棒 3-class Gas lift		1

扫一扫获取安装视频教程  
Scan to get the installation video tutorial



第一步：扫码关注林氏木业公众号  
Step 1: scan the code to subscribe the  
LINSY official account

第二步：成功关注后 自动弹出安装视频  
Step 2: after following, the installation  
video will pop up automatically

## 部件表 / Accessories list

编号 NO.	名称 Name	规格 Specification	数量 QTY	材质 Material
①	靠背 Backpad	54cm*46cm*4cm	1	层板+海绵+毛麻 Wood+Foam+Flax
②	座垫 Seatpad	49cm*45cm*7cm	1	层板+海绵+毛麻 Wood+Foam+Flax
③	椅脚 Base	J30-300	1	铁质 Iron
④	工作底盘 Mechanical		1	铁质 Iron


产品名称  
Model NO.

BY003-A/B

# 安装示意图


## Assembly Instruction

## STEP 1

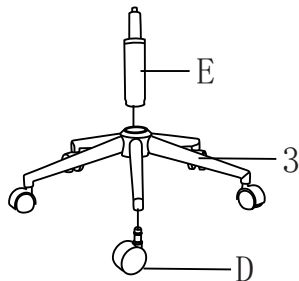


把椅轮分别装入椅脚的五个脚孔，再将气压棒装入椅脚的中心孔。  
Install the caster into the five foot holes, Then put the gas lift into the center hole of the chair foot

## STEP 3

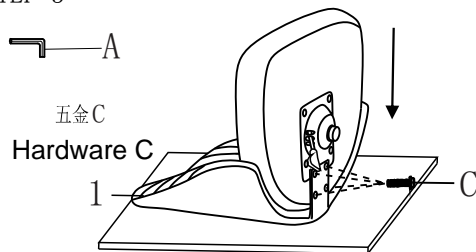


将靠背放置在底座与坐垫的中心位，使用五金C对准底座与坐垫的孔位锁紧固定。  
Place the backrest at the center of the mechanical and the seatpad, and use hardware C to lock it

## STEP 5

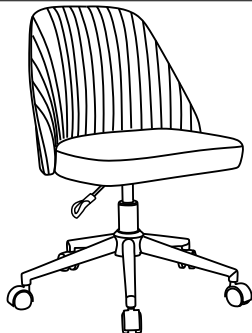


## STEP 2

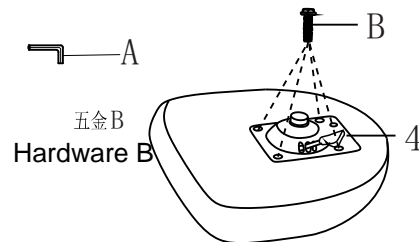

将底座放置在坐垫的中心位，使用五金B对准坐垫的孔位锁紧固定。  
Place the mechanical at the center of the seatpad, and use hardware B to lock it

## STEP 4

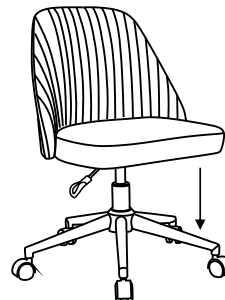

气杆的顶端对准底座的孔位对接，完成安装

Align the top end of the gas lift with the hole of the mechanical, and finish