
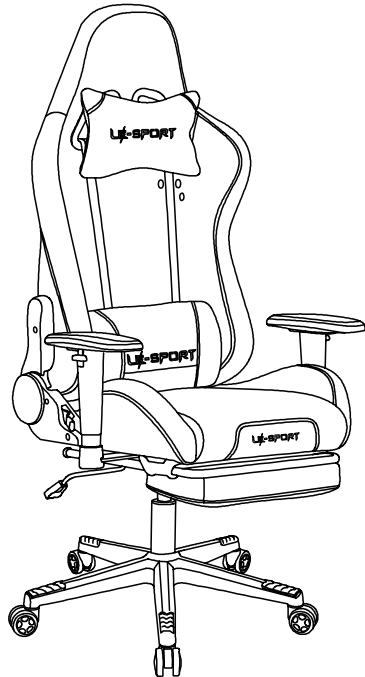


LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO	BY077-B (computer chair)	产品规格 Specification	670*730*1250-1325
---------------	-----------------------------	--------------------	-------------------

安装工具 Tools required	安装人数 No. of people required
---------------------	-----------------------------



五金表 Hardware list

编号 NO	名称 Name	图示 Diagram	数量 QTY
Ⓐ	5mm六角十字扳手Wrench		1
Ⓑ	带垫大扁头内六角Screw(M8X20)		20
Ⓒ	十字沉头Screw (M5*10)		6
Ⓓ	80#白色_三级_包口_双缩1.5cm 80# white,level 3,two-way adjustable(1.5cm)		1


部件表 Parts List

编号 NO	名称 Name	图示 Diagram	数量 QTY	材质 Material
①	背软包 Back soft case		1	公仔棉+铁架+海绵+PU dollcotton+iron frame +Sponge+PU
②	座软包 Seat soft case		1	层板+铁架+海绵+PU Plywood+iron frame+Sponge +PU
③	左扶手 Left armrest		1	钢+PP+聚氨酯 Steel+PP +Polyurethane
④	右扶手 Right armrest		1	钢+PP+聚氨酯 Steel+PP +Polyurethane
⑤	1#白色尼龙赛车椅脚 Star base		1	尼龙 nylon
⑥	19托 Tray		1	黑色铁质 Black iron
⑦	右调角器 Right recliner		1	金属 Metal
⑧	左调角器 Left recliner		1	金属 Metal
⑨	右塑料盖 right plastic cover		1	PP PP
⑩	右塑料盖 right plastic cover		1	PP PP
⑪	左塑料盖 left plastic cover		1	PP PP
⑫	左塑料盖 left plastic cover		1	PP PP
⑬	5孔黑白赛车轮 Wheels		5	PP PP

STEP:1

将部件7(右调角器)用配件B(带垫大扁头内六角M8*20)固定在部件2(座软包)


Fix part 7 (right recliner) to part 2 (Seat soft case) with accessory B (M8*20 screws)

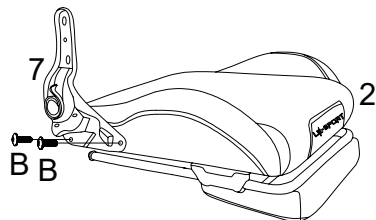

STEP:2

如图所示,将部件1(背软包)放置坐垫上面


Place part 1 (Back soft case) on top of the cushion as shown

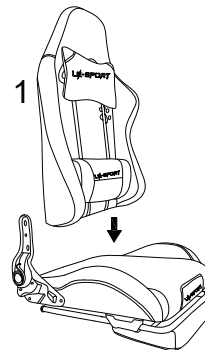

STEP:3

如图所示,用配件B(带垫大扁头内六角M8*20)将部件7(右调角器)与靠背固定


Fix part 7(right recliner) to the backrest with fitting B(M8*20 screws) as shown in the figure

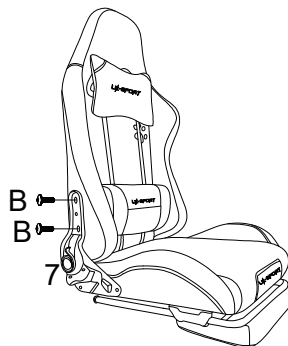

STEP:4

用配件B(带垫大扁头内六角M8*20)将部件8(左调角器)固定在靠背与坐垫上

Fix part 8(left recliner) to backrest and cushion with fitting B(M8*20 screws)

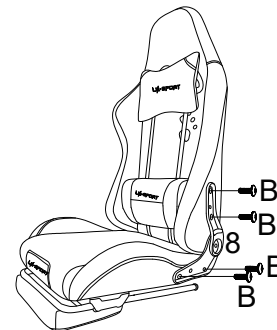

产品名称 Model NO BY077-B


安装示意图

Assembly Instruction

STEP:5

如图所示,用配件C(十字沉头M5*10)将部件9,10(右侧塑料盖)固定在座椅和靠背上。


Secure parts 9, 10 (right plastic cover) to backrest and cushion with spare part C (M5*10 screws) as shown

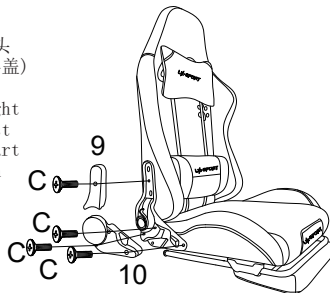

STEP:6

如图所示,用配件C(十字沉头M5*10)将部件11,12(左侧塑料盖)固定在座椅和靠背上。


Secure parts 11, 12 (left plastic cover) to backrest and cushion with spare part C (M5*10 screws) as shown

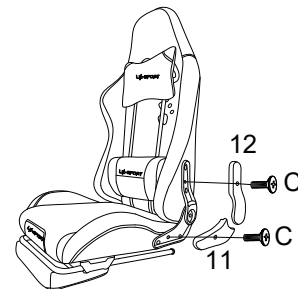

STEP:7

将部件6(托盘)用配件B(带垫大扁头内六角M8*20)固定在部件2(座软包)。


Fix part 6 (tray) to part 2 (Seat soft case) with accessory B (M8*20 screws)

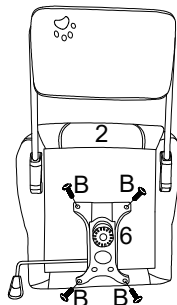

STEP:8

将部件3(左扶手)和部件4(右扶手)用配件B(带垫大扁头内六角M8*20)固定在部件2(座软包)。


Fix part 3(left armrest) and part 4(right armrest) to part 2 (seat soft bag) with fitting B (M8*20 screws)

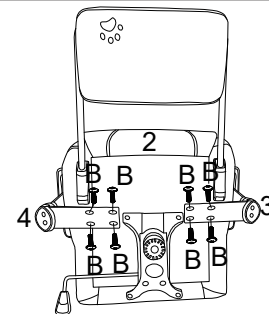

STEP:9

把部件13(轮子)分别装入部件5(五星脚)的五个脚孔,将五金D(三级气杆)装入椅脚的中心孔,气杆的顶端对准托盘的孔位对接固定。

Install component 13(wheels) into the five foot holes of component 5(five-star feet) respectively, install hardware D (three-level air rod) into the center hole of chair feet, and align the top end of air rod with the hole position of tray for butt joint fixation.

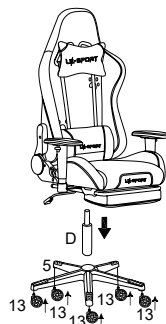

STEP:10

安装完成

The installation is complete.

