


如何区分沙发的左右方向?  
How to distinguish the left and right directions of the sofa?



安装人数  
Installer  
安装工具  
Use tools

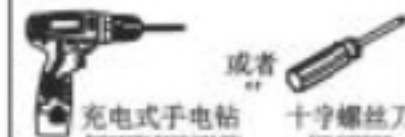

产品名称 Model NO. TBS606

产品规格 Specification 1.55m or 1.85m or 2.15m

尺寸组合 Combined size 1550(1850/2150)\*870\*1000

成品部件 明细 Details of finished parts	编号 No.	名称 Name	部件尺寸 Component dimensions	数量 Quantity
	1	左扶手 Left armrest	科技布+木方+海绵+五金配件+夹板 Tech fabric + wood strip + sponge + hardware + clip board	1
	2	右扶手 Right armrest	科技布+木方+夹板+海绵+实木配件 Tech fabric + wood strip + clip board + sponge + solid wood parts	1
	3	铁架 Iron frame	五金 Hardware	1
	4	靠背 Backrest	五金+科技布 Hardware + Tech fabric	1
	5	挡板 Baffle	科技布+夹板+海绵 Tech fabric + clip board + sponge	1
	6	大号垫子 Large cushion	海绵+科技布 Sponge + Tech fabric	1
	7	中号垫子 Medium cushion	海绵+科技布 Sponge + Tech fabric	1
	8	小号垫子 Small cushion	海绵+科技布 Sponge + Tech fabric	1
	9	靠枕 Pillow	科技布+白布枕芯 Tech fabric + white cloth pillow core	2
	10			
11				

制图 Drafting C20

### 配件表1 Accessories list 1

编号 No.	名称 Name	图示 Figure	总数 Total
A	说明书(含安装图) Mounting instruction (with drawing)		1
B	斜边内六角螺杆-M8*45 M8*45 bevel cross bolt		14
C	M8垫片 M8 pad		12
D	M5*45白攻螺丝 M5*45 self tapping screw		3
E	5mm内六角扳手 5mm internal hexagonal wrench		1
F			
G			
H			
I			
J			

## 双人 Double

STEP 1:

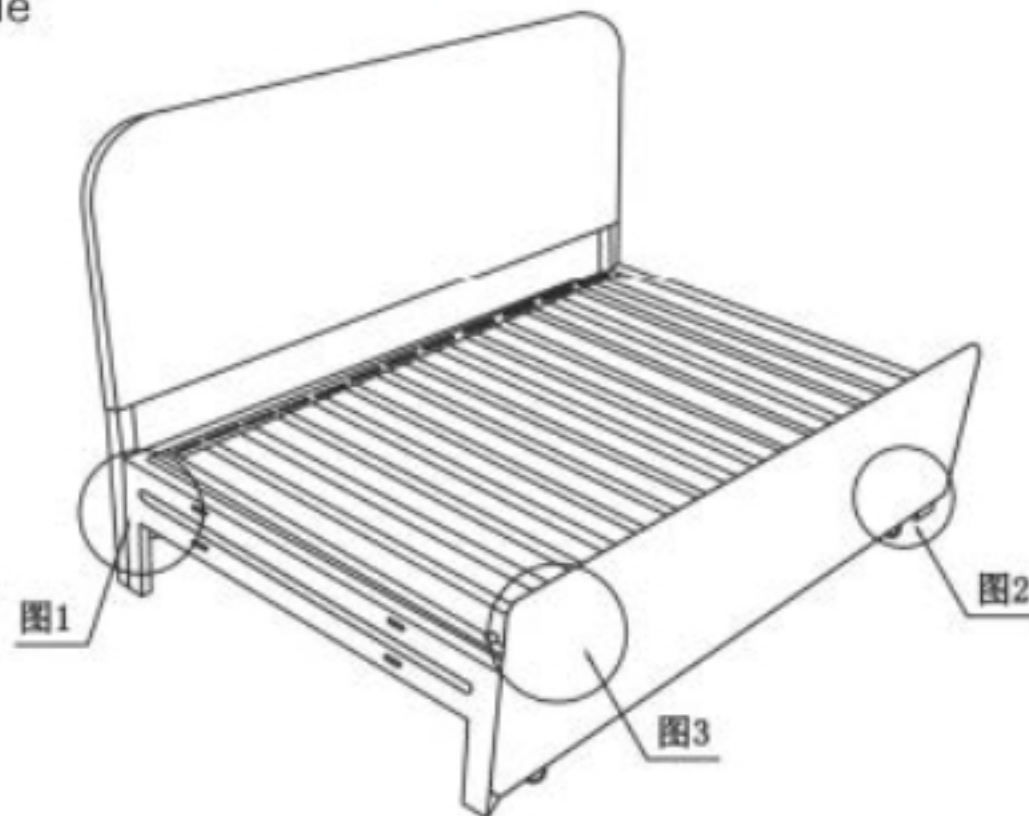


图1:靠背和铁架安装示意图  
Figure 1: installation diagram of backrest and iron frame

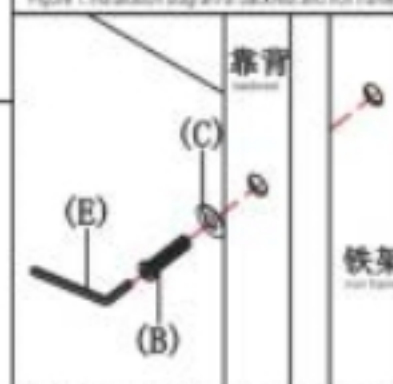


图2:前挡板和铁架安装示意图(1)  
Figure 2: installation diagram of front baffle and iron frame (1)

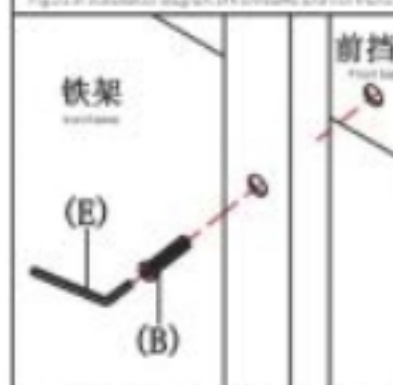
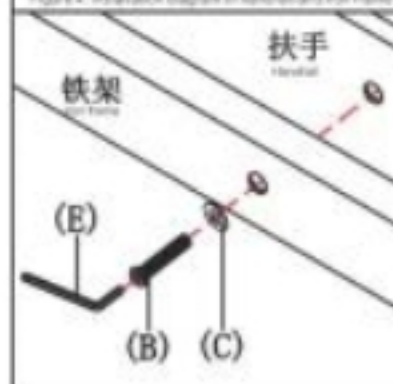


图3:前挡板和铁架安装示意图 2  
Figure 3: installation diagram of front baffle and iron frame (2)

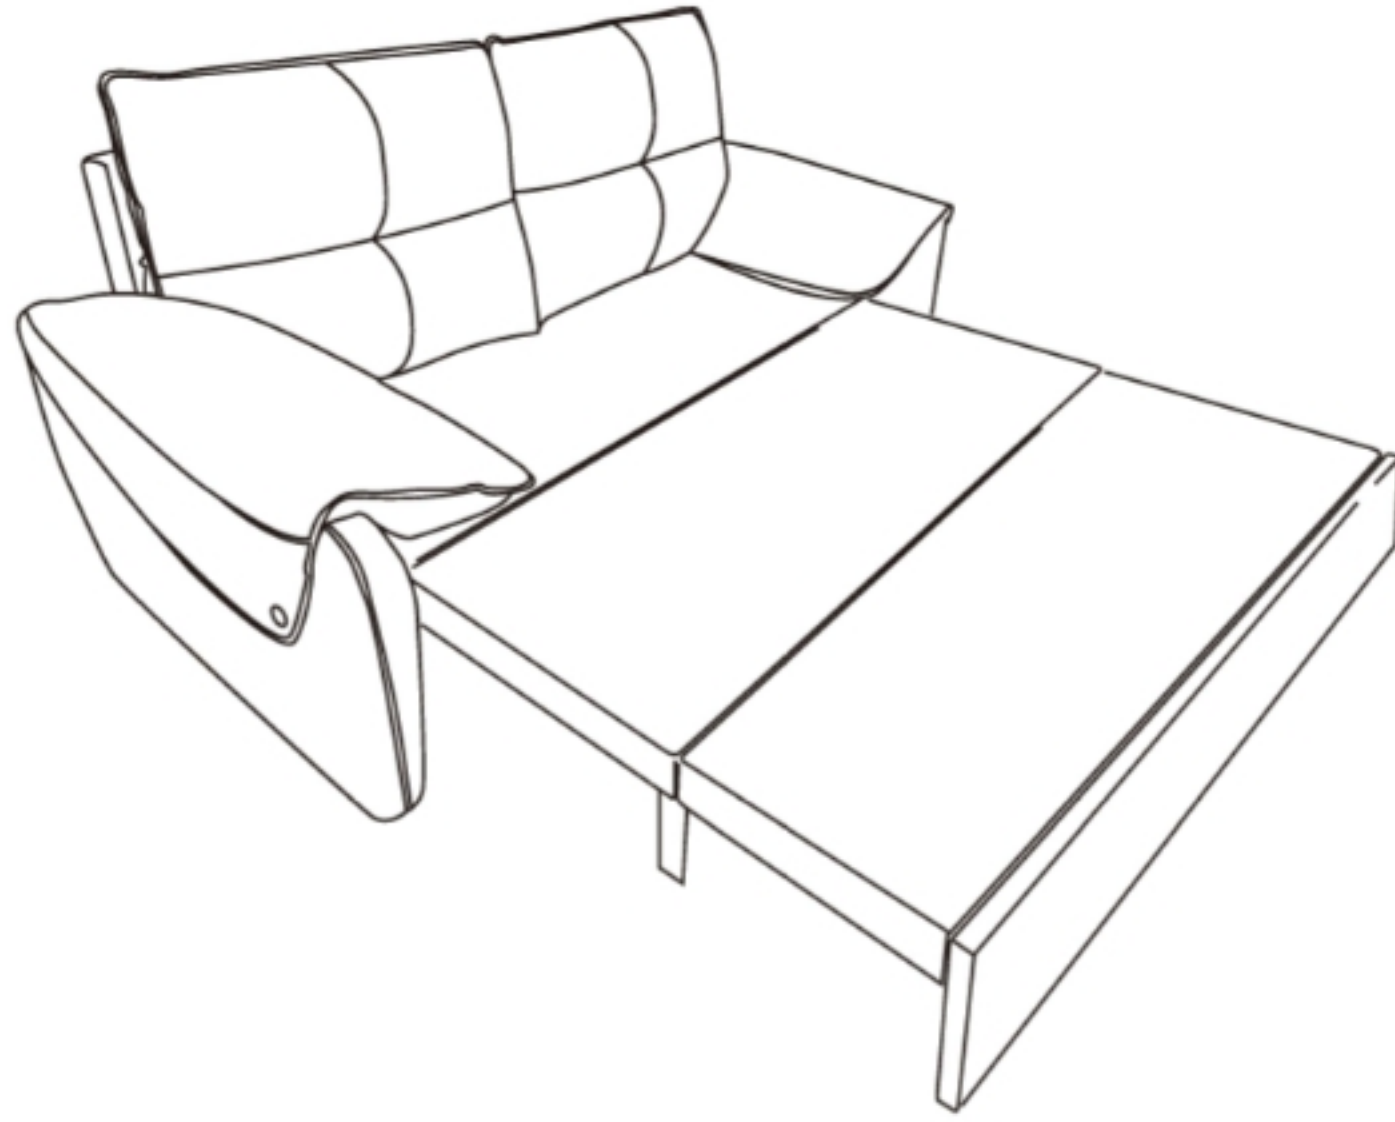


图4:扶手和铁架安装示意图  
Figure 4: installation diagram of armrest and iron frame



STEP 2:



**安装提示:**

- 1、先拿开垫子拉出铁架。
- 2、将垫子铺上铁架上。

**Installation Tips:**

1. First take away the mat and pull out the iron frame.
2. Put the mat on the iron frame.

**组合图 双人**

Combination diagram

Double

