
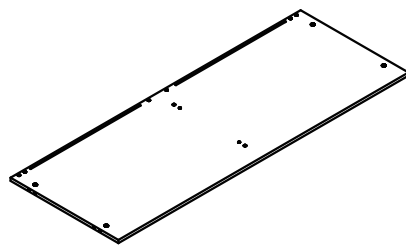
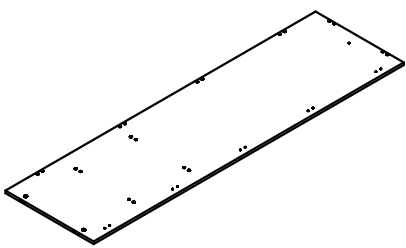
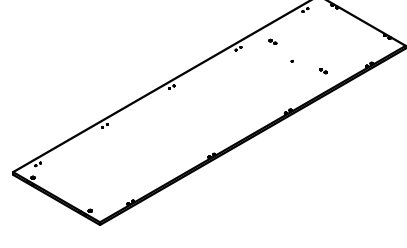
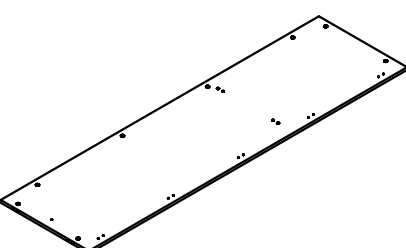
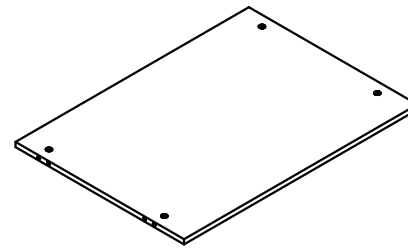
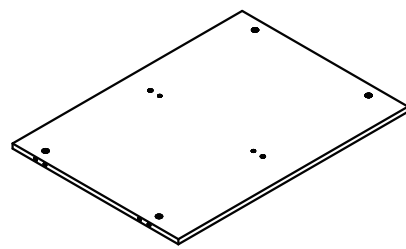
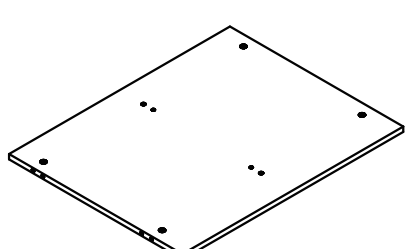
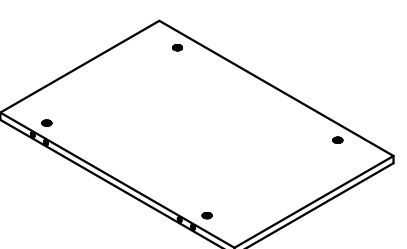
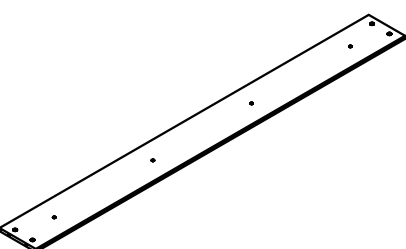
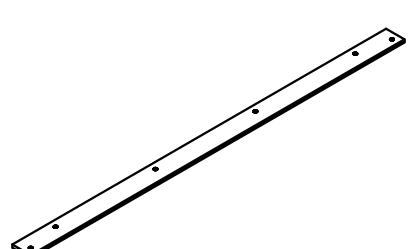
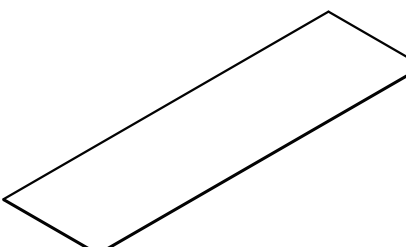
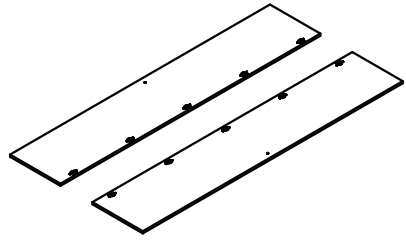
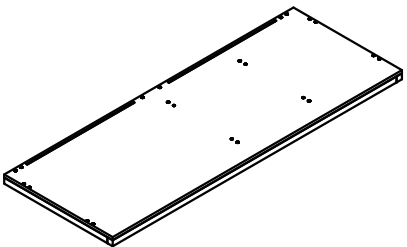
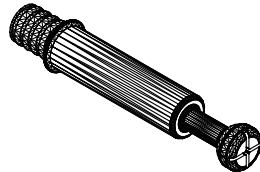
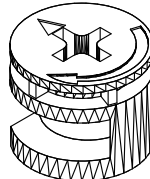
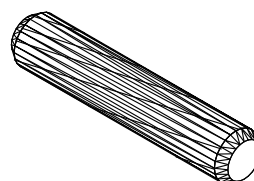
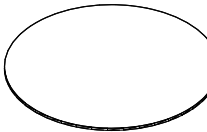
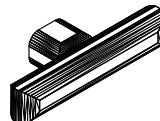

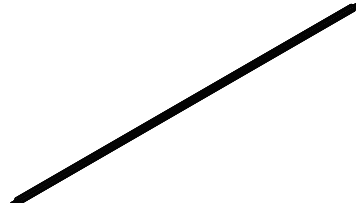



①Top panel  1×	②right side panel  1×	③Left side panel  1×	④Center vertical panel 1  1×	⑤Left solid panel 1  1×				
⑥Right solid panel 2  1×	⑦Center vertical panel 2  1×	⑧Right fixed plate 3  1×	⑨Back framework panel 1  1×	⑩Back framework panel 2  2×				
⑪Back panel  2×	⑫Left and right door panels  4×	⑬Bottom panel  1×	A、Cam pin  56+1×	B、Cam lock  56+2×				
C、Dowel  36×	D、Cam cover  56×	F、T-shape pull handle  4×	E、Puller screw  4×	G、Clothes rail  2×				
				<table><tr><td>Model</td><td>GF795-1606</td></tr><tr><td>Size</td><td>1600W*600D*2100H</td></tr></table>	Model	GF795-1606	Size	1600W*600D*2100H
Model	GF795-1606							
Size	1600W*600D*2100H							

H. Hanging bracket

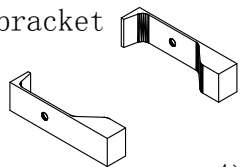


4×

I. Japanese-made nails

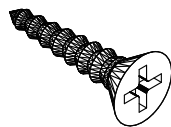


128×

J. Insert door hinge

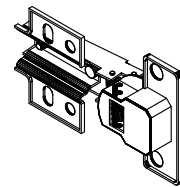


10×

K. Mid-curve hinge

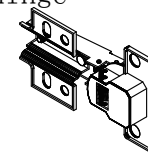


10×

L. Dual-purpose screwdriver

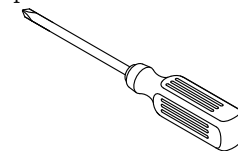


1×

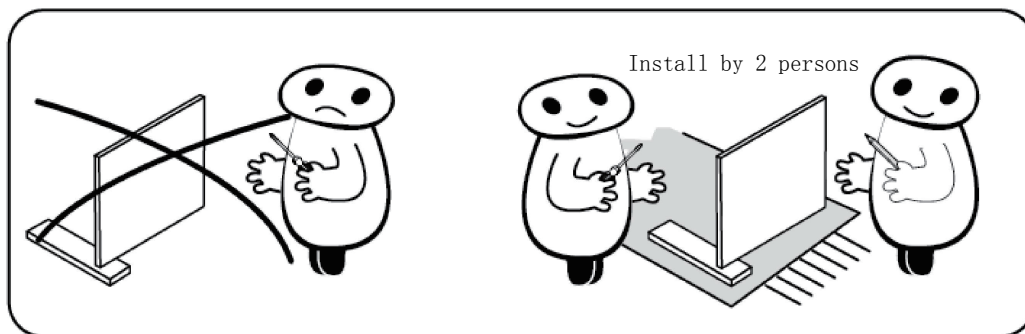


## Step 1


Attention: First of all, put a piece of carton or rug on the floor, and then begin to install the panels, so as to prevent the parts from scratch.

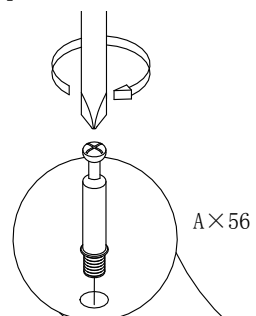


A×56

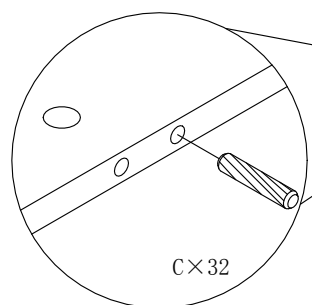

C×32

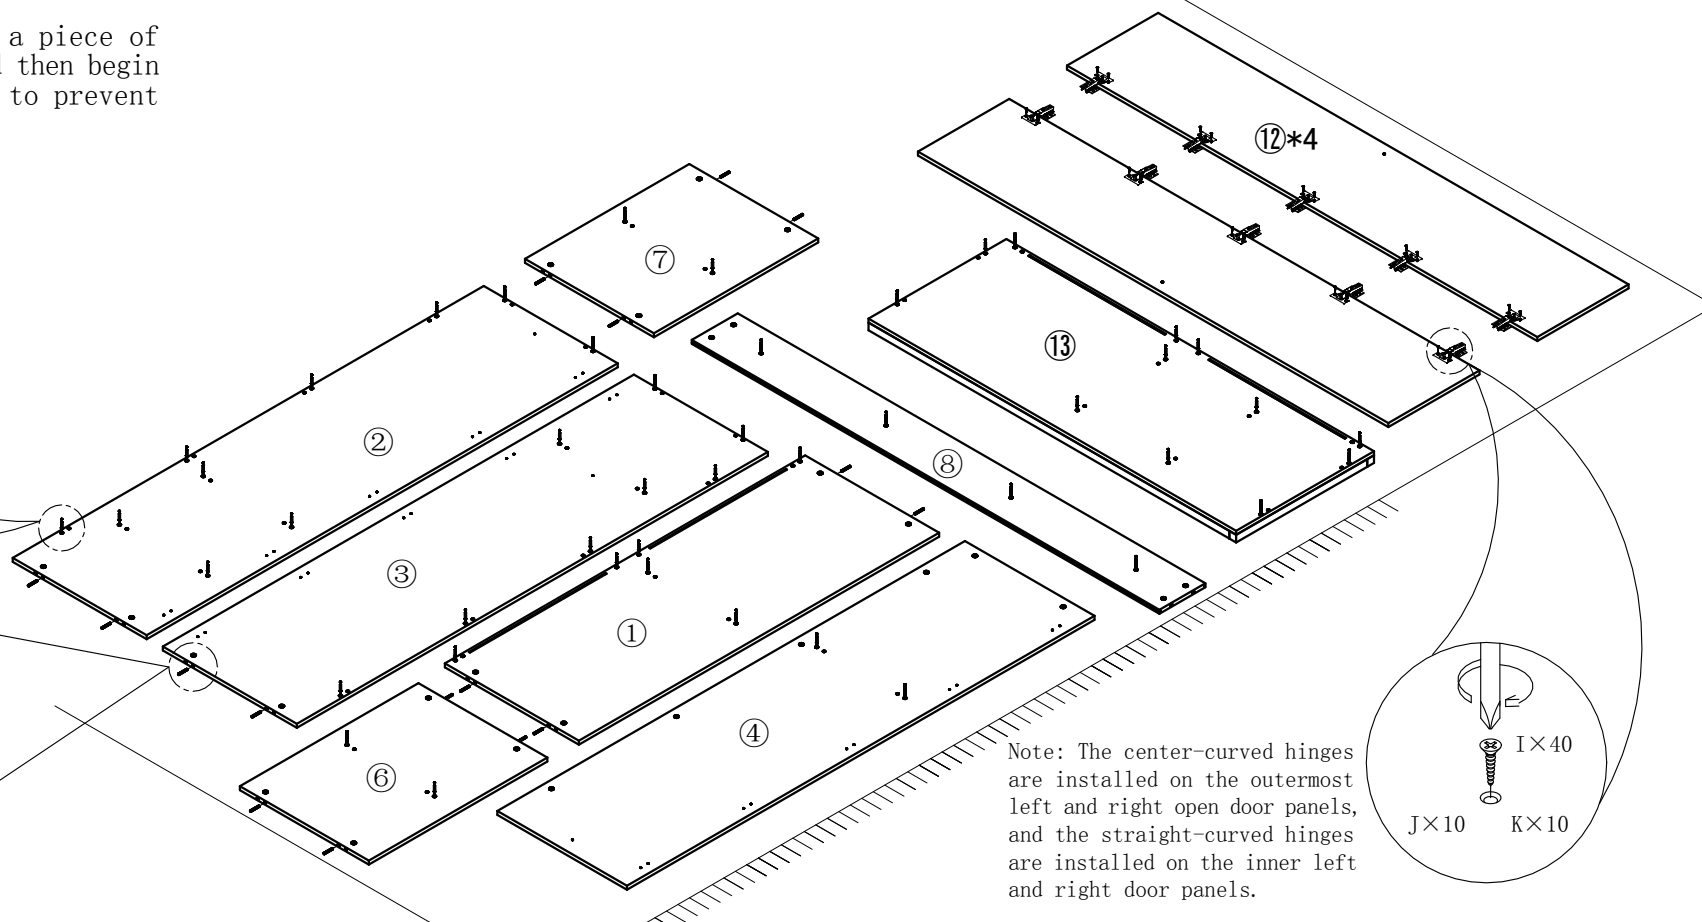


Note: The center-curved hinges are installed on the outermost left and right open door panels, and the straight-curved hinges are installed on the inner left and right door panels.

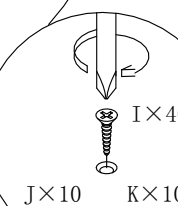


I×40  
J×10 K×10


Step 2

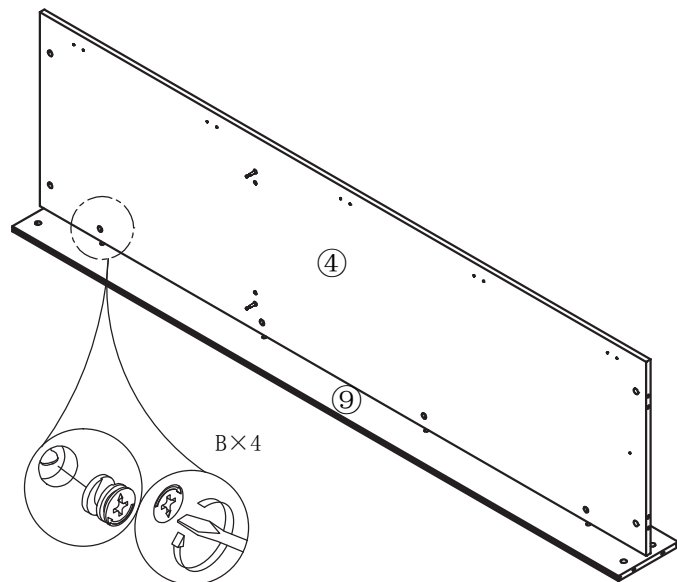


Step 3

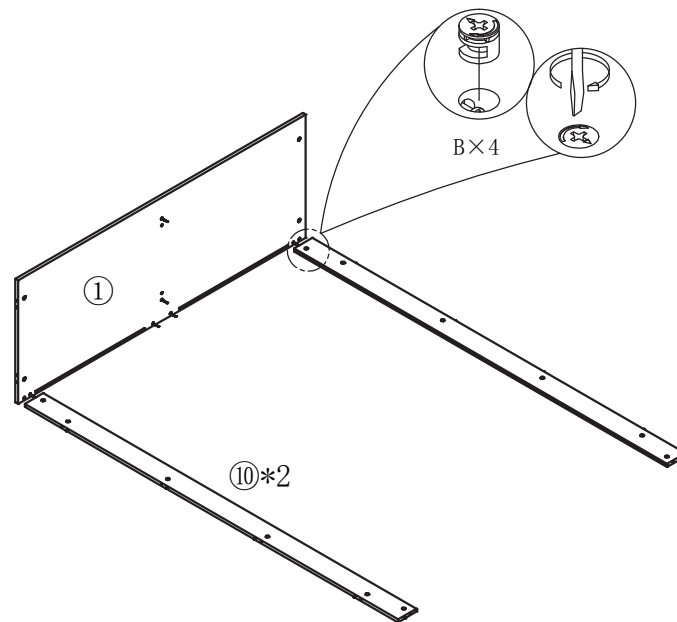


Step 4

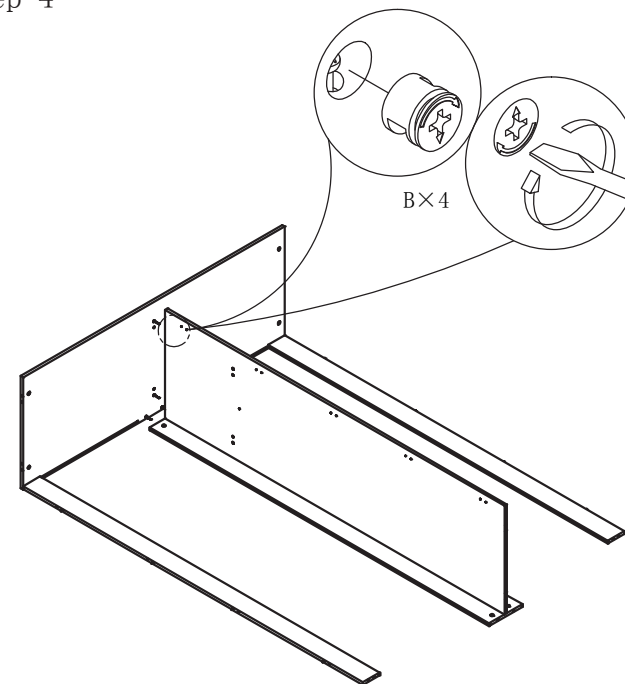


Step 5

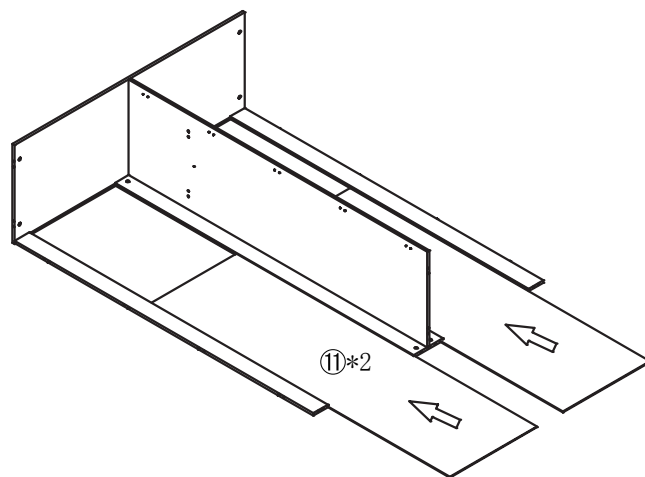


Step 6

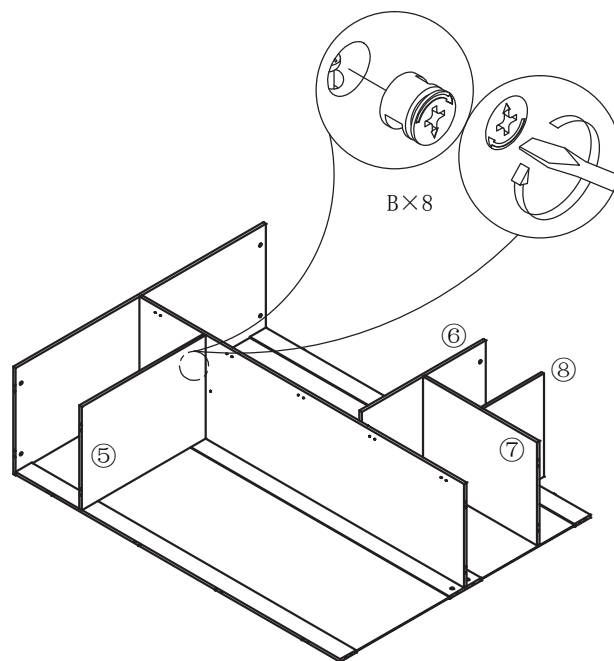


Step 7

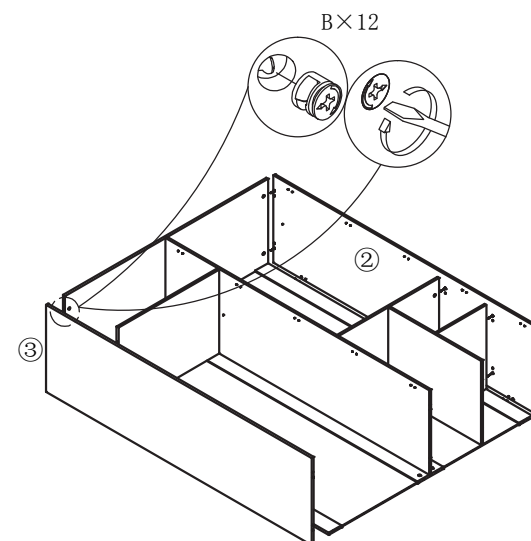


Step 8

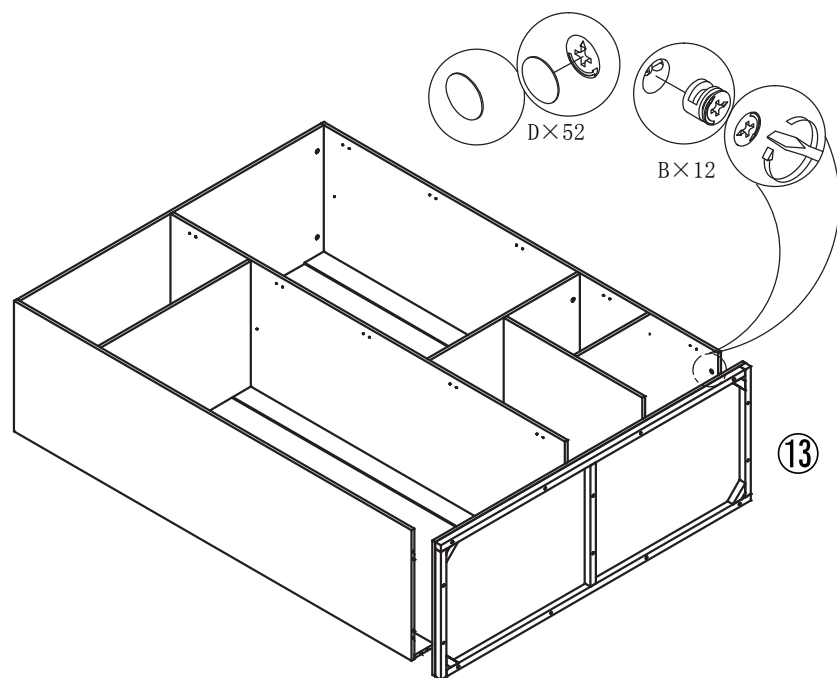

Step 9

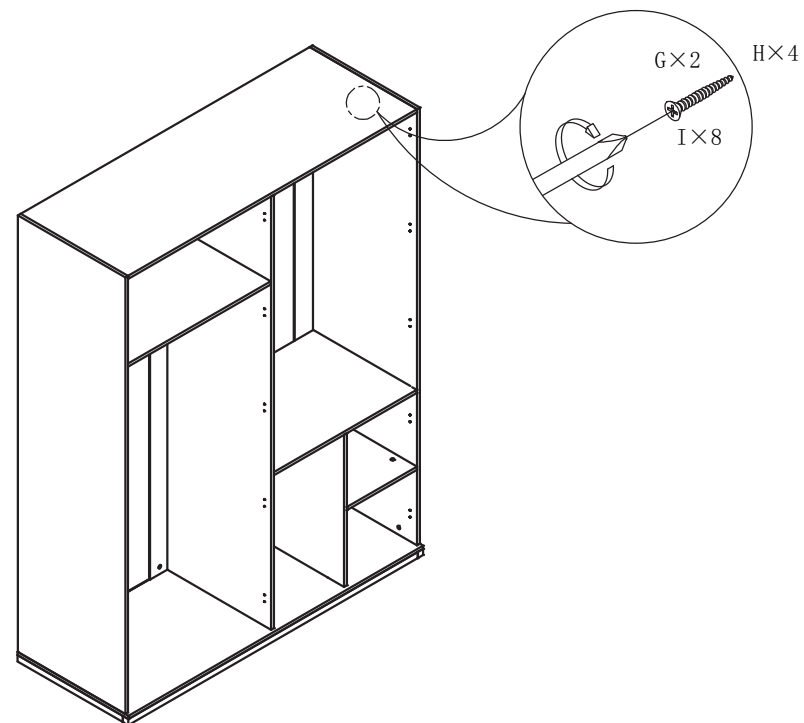

Step 10

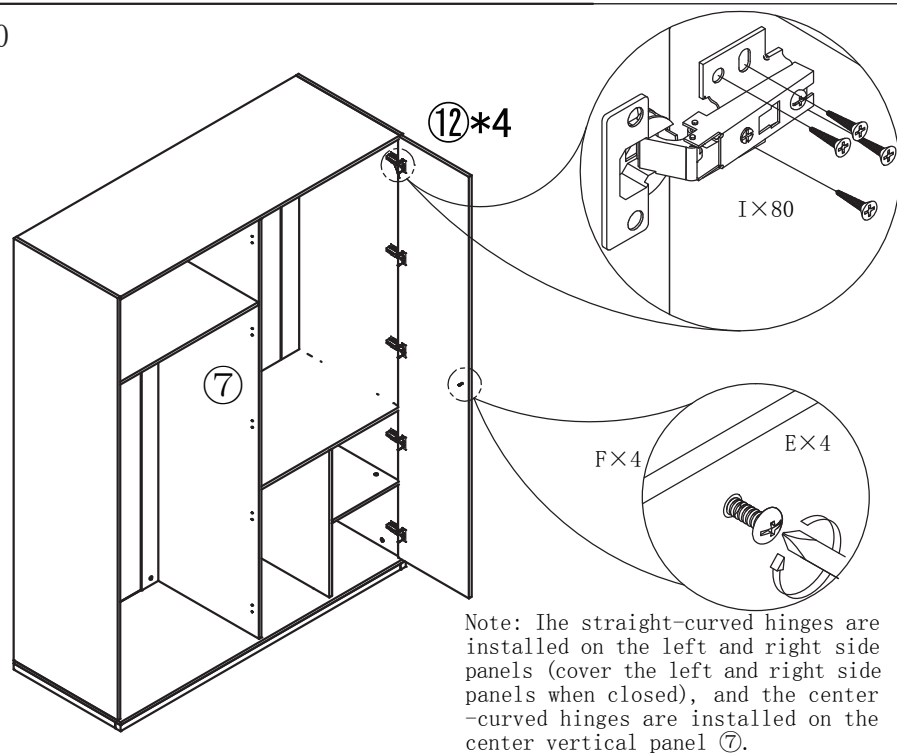

Step 11

