
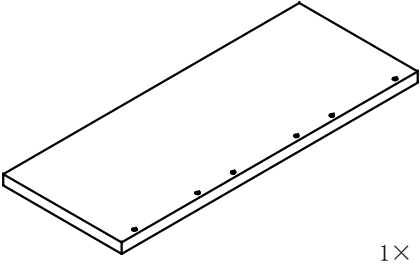
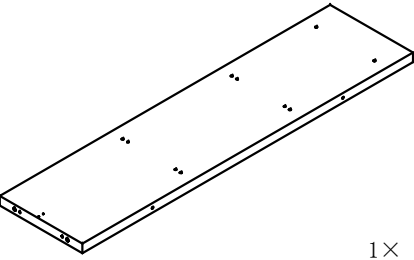
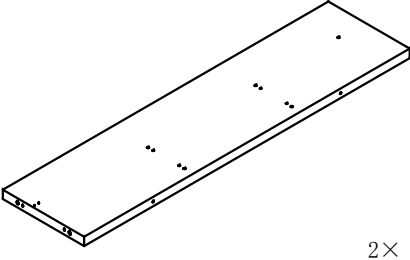
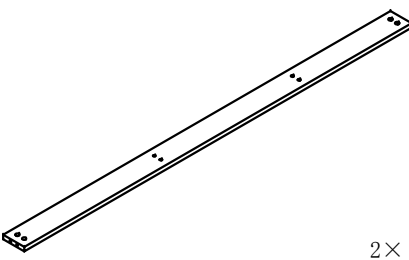


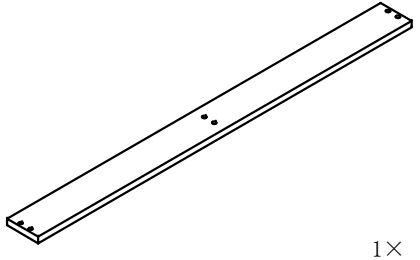
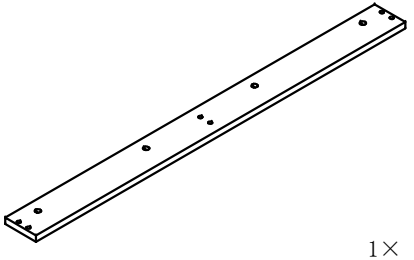
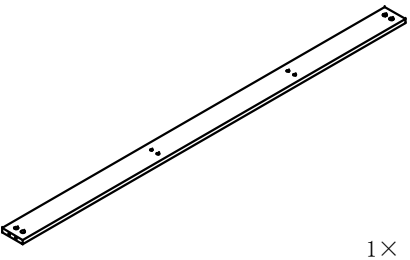






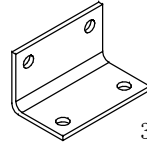

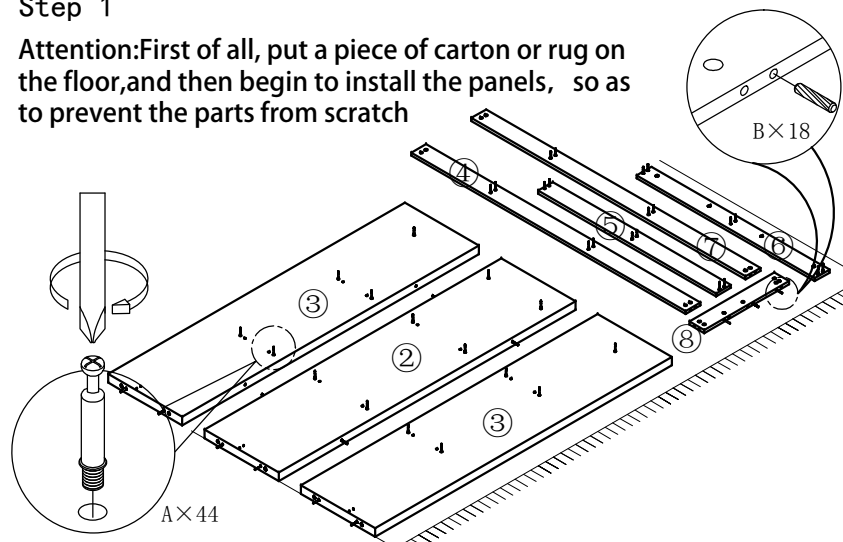



①Bedboard  1×	②Middle bedboard  1×	③Left and right bedboards  2×	④Base frame side panel  2×	A. Cam pin  44×	B. Dowel  22×
⑤Base frame back panel  1×	⑥Base frame front panel  1×	⑦Bottom frame interplate  1×	⑧Bottom frame partition  4×	C. Cam lock  44×	D. Chamfered hexagonal machine wire  6×
				E. 6N spanner  1×	F. Cam cover  44×
				G. Dual-purpose Screwdriver  1×	H. Middle corner connector  3×
				I. Wood screw  12×	

Step 1

Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch

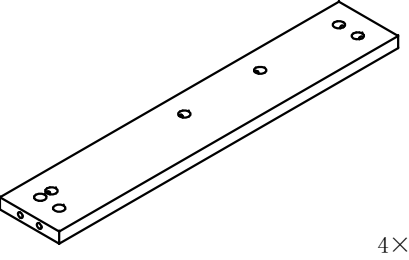


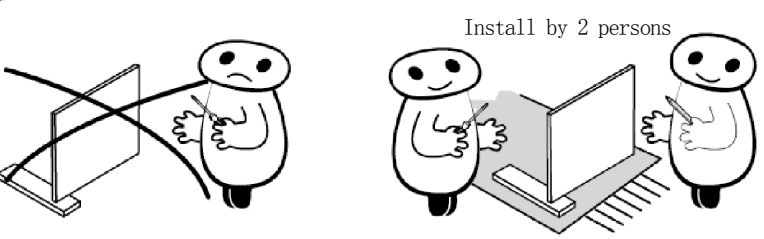Step 2

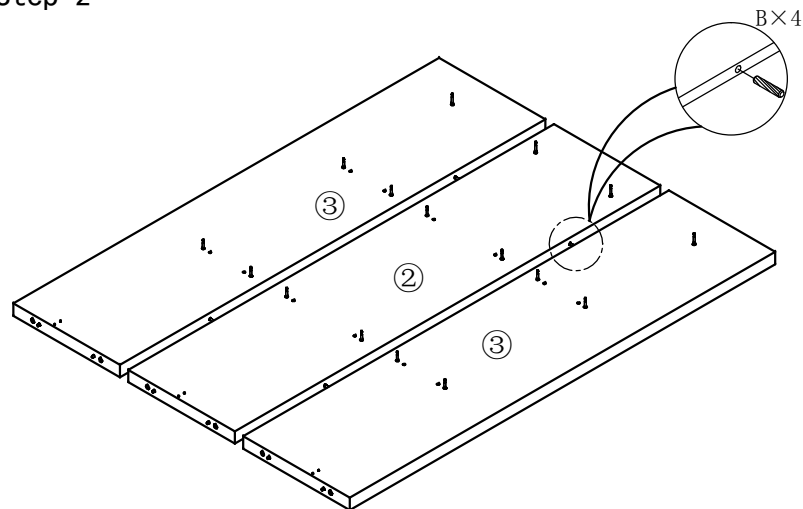


Model	GF095-18
Name	Bed
Size	1800W*2050D*705H


Step 3

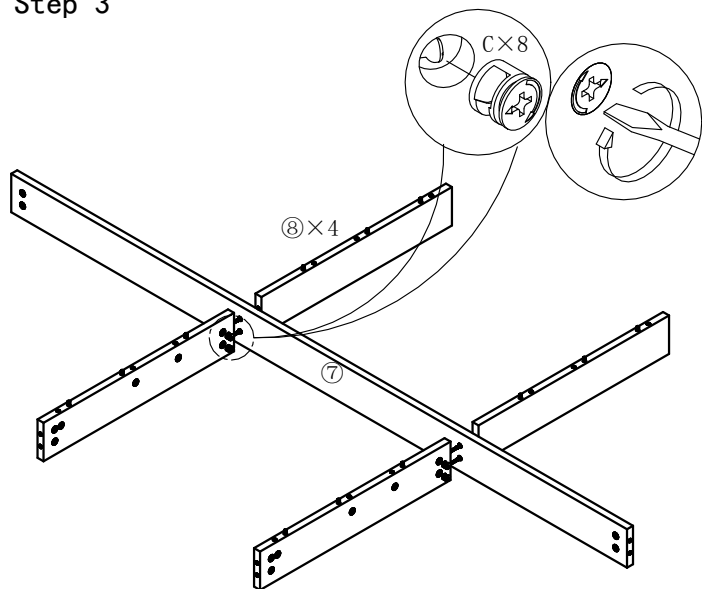


Step 4

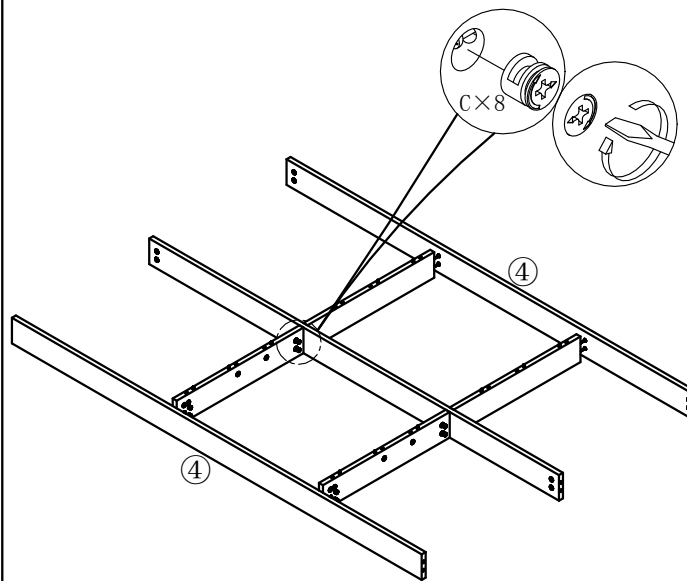


Step 5

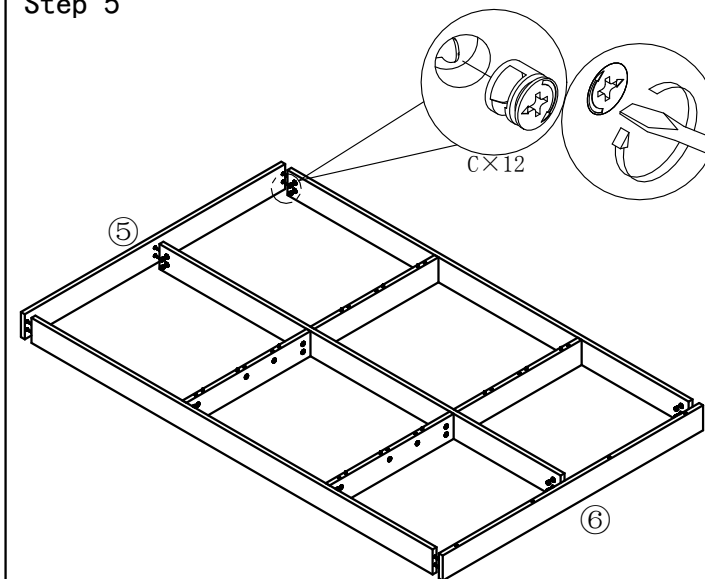

Step 6

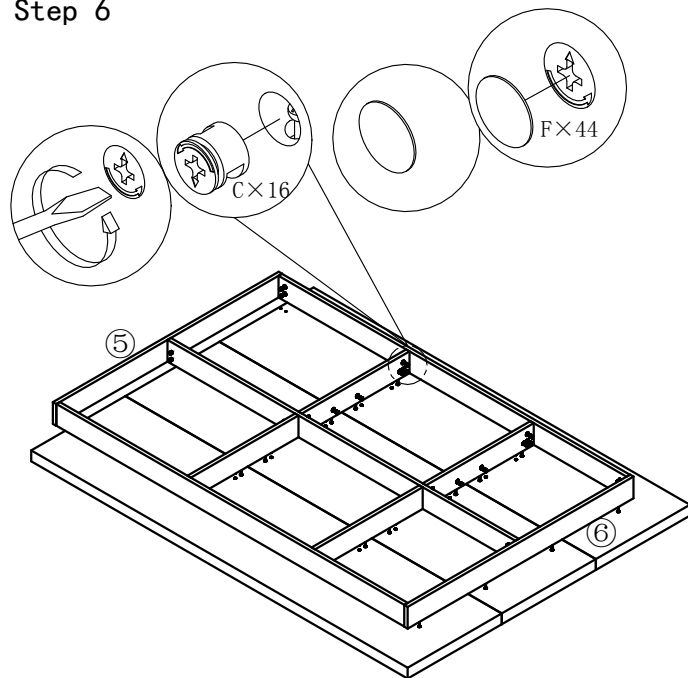

Step 7

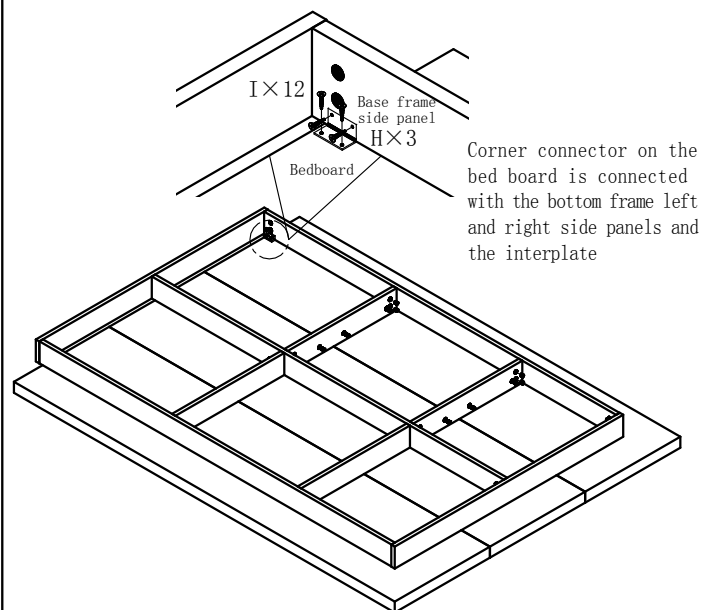

Step 8

