


# LINSY 林氏家居

## 安装示意图/Assembly Instruction

产品名称 Model NO	BY040-AB电脑椅 (computer chair)	产品规格 Specification	600*600*725-800
---------------	---------------------------------	--------------------	-----------------

安装工具 Tools required	安装人数 No. of people required
---------------------	-----------------------------

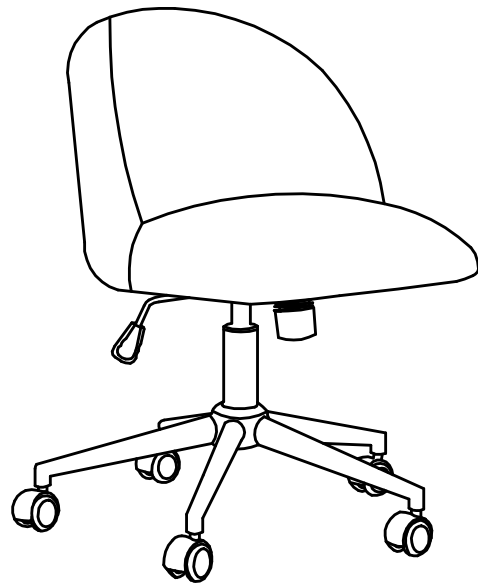

## 五金表 Hardware list

编号 NO	名称 Name	图示 Diagram	数量 QTY
Ⓐ	5mm六角扳手Wrench		1
Ⓑ	大扁头内六角Screw(M6X20)		4
Ⓒ	80#白色_三级_双缩1.5cm气杆 Air rod		1
Ⓓ			

## 部件表 Parts List


编号 NO	名称 Name	图示 Diagram	数量 QTY	材质 Material
①	背座 Back seat frame		1	机压板+铁架+海绵+仿兔毛 Plywood+iron frame+Sponge +Rabbit hair imitation
②	300#脚 Foot		1	白纱纹 White yarn pattern
③	AQ305-0021托盘 Tray		1	黑色铁质 Black iron
④	2.0寸中杯口 PU黑白插轮 wheels		5	PU PU

## 安 装 示 意 图

Assembly Instruction


## STEP:1

将部件4 (2.0寸中杯口PU黑白插轮) 分别装在部件2 (300#拉伸脚) 上Install part 4 (wheels) on part 2 (foot).

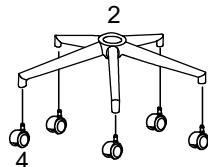


## STEP:2

将配件C (80#白色\_三级\_双缩1.5cm气杆) 装入椅脚中心孔  
Install accessory C (air rod) into the center hole of the chair foot.

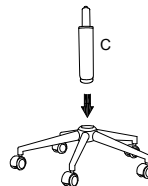


## STEP:3

将部件3 (托盘) 用配件B (M6\*20的螺丝) 锁在部件1 (背座) 上  
Lock part 3 (tray) on part 1 (seat back frame) with accessory B (M6\*20 screws)

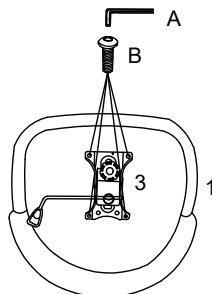

## STEP:4

气杆的顶端对准底盘的孔位对接  
Align the top of the air rod with the hole in the chassis

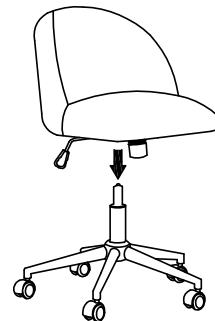

## STEP 5

安装完成

The Installation is completed.

