


产品名称 Model NO BY082-A/B

安装示意图

Assembly Instruction


STEP:1

将配件B (2寸黑色PU轮) 分别装在部件2 (350#大平脚) 上, 再将配件A (三级气杆) 装在部件2 (350#大平脚) 的中心孔Install accessory B (wheels) on part 2 (foot), and then install accessory A (air rod) on the center hole of part 2 (foot)

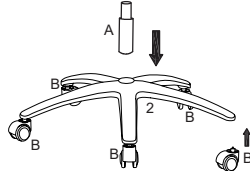

STEP:2

气杆的顶端对准底盘的孔位对接
Align the top of the air rod with the hole in the chassis

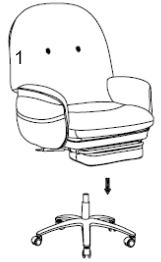

STEP 3

安装完成

The Installation is completed.

